


Cleansing [REAR CLEANSING] (Push the top side) : Cleanses your rear.
 [REAR SOFT] (Push the bottom side) : Cleanses your rear with a gentle water flow.

[FRONT CLEANSING] (Push the top side) : Serves as a bidet for women.
 [WIDE] (Push the bottom side) : Cleanses a wider area with the bidet.

Drying

[DRYER] : Dries your front and/or rear.

Stopping [STOP] : Stops the operation.

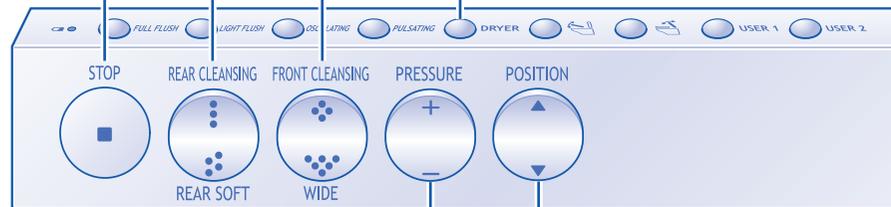

Function that operate when a button is pressed during "REAR CLEANSING", "REAR SOFT", "FRONT CLEANSING" or "WIDE".

[PRESSURE]

- You can adjust the water pressure to one of five levels. ("+" : Stronger, "-" : Softer)
- When you press the flush button, the pressure returns to the default setting (pressure setting 3).

[OSCILLATING]


- When you press this button, the wand moves back and forth to wash you thoroughly.

[POSITION]

- You can adjust the position to one of five positions. ("▲" : Moves to the front, "▼" : Moves to the rear)
- When you press the flush button, the position returns to the default position (position setting 3).

[PULSATING]

- When you press this button, the wand cleanses with pulsation.

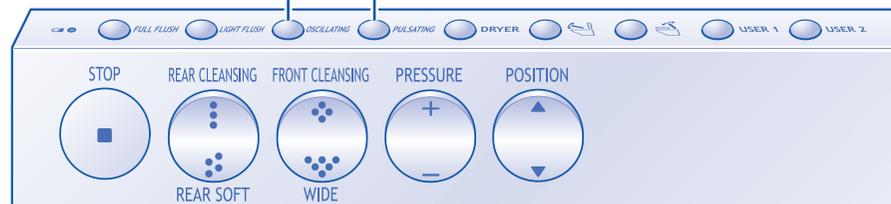

When flushing or opening/closing the toilet lid/seat with the remote control

Flush


[FULL FLUSH] : Perform a full flush.

[LIGHT FLUSH] : Perform a light flush.

Opening and closing

[SEAT OPEN/CLOSE] : Opens and closes the toilet seat.

[LID OPEN/CLOSE] : Opens and closes the lid.

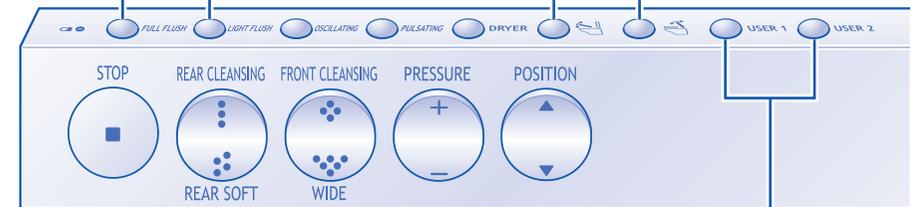

[PERSONAL SETTING LOCK 1] / [PERSONAL SETTING LOCK 2]

You can store your preferred wand position, water pressure and water temperature settings.

● To store a setting

While cleansing is in progress, set your preferred wand position, water pressure, and water temperature, and then press and hold [USER 1] or [USER 2] for 2 seconds or longer.


 
● To use

After [USER 1] or [USER 2] is pressed, please push the button used for cleaning.

If you cannot operate with the remote control

Operation is also possible using the buttons on the Washlet control panel.



Washlet control panel

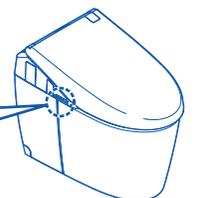

How to fully utilize the Washlet

• See Instruction Manual for details.

Remove the remote control from the hanger to configure settings.

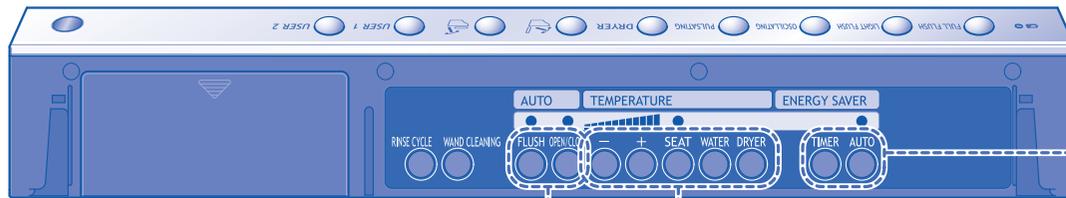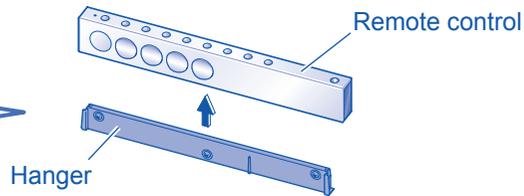

AUTO FLUSH



As you move away from the bowl, toilet is flushed automatically.


AUTO OPEN/CLOSE



The lid opens and closes automatically by detecting the user.

Temperature Adjustment


Temperatures of "SEAT", "WATER" and "DRYER" can be changed.

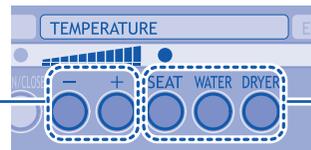

1 Press the button you want to adjust.



 2 Select the temperature level.



Energy-Saver Features

Auto energy-saver


The Washlet detects time periods with infrequent use and lowers the toilet seat temperature automatically.

- Auto energy-saver takes about 10 days to detect time periods in which the toilet seat is never or infrequently used.

AUTO



Press [AUTO].

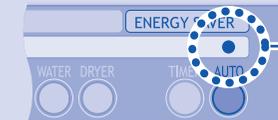

Displayed

■ To stop auto energy-saver

AUTO



Press [AUTO] again.



Not displayed

Timer energy-saver

When the desired time for saving energy is set, the heater is turned off automatically every day at this time.

- You can set to 3, 6, or 9 hours.

Example: To save energy from 1 am to 7 am (for 6 hours)

TIMER



At 1am, press [TIMER] repeatedly until "6" is displayed.

